

■ Ordering method RCX340-4 YK1000XG Specify various controller setting items. RCX340 ▶ P.508 BB R3 eratizve unit - Expansion I/O - Network option - iVY System - Gripper - Battery Specify various controller setting items. RCX240/RCX240S ▶ P.495

Standard type: Large type

Specifi	ications					
			X-axis	Y-axis	Z-axis	R-axis
Axis	Arm length		600 mm	400 mm	200 mm 400 mm	-
specifications	Rotation angle		+/-130 °	+/-150 °	-	+/-360 °
AC servo motor output			750 W	400 W	400 W	200 W
Deceleration mechanism	Speed reducer		Harmonic drive	Harmonic drive	Ball screw	Harmonic drive
	Transmission	Motor to speed reducer	Direct-coupled			
	method	Speed reducer to output	Direct-coupled			
Repeatability Note 1			+/-0.0	2 mm	+/-0.01 mm	+/-0.004 °
Maximum speed			10.6	m/sec	2.3 m/sec 1.7 m/sec	920 °/sec
Maximum payload			20 kg			
Standard cycle time: with 2kg payload Note 2			0.49 sec			
R-axis tolerable moment of inertia Note 3			1.0 kgm ²			
User wiring			0.2 sq × 20 wires			
User tubing (Outer diameter)			ф 6 × 3			
Travel limit			1.Soft limit 2.Mechanical stopper (X,Y,Z axis)			
Robot cable length			Standard: 3.5 m Option: 5 m, 10 m			
Weight			Z axis 200 mm: 56 kg Z axis 400 mm: 58 kg			

Note 1. This is the value at a constant ambient temperature. (X,Y axes)
Note 2. When reciprocating 300mm in horizontal and 25mm in vertical directions.
Note 3. There are limits to acceleration coefficient settings. See P.539.
Note. Please consult YAMAHA when connecting other tubes and cables to the self-supporting machine harness.

Controller							
Controller	Power capacity (VA)	Operation method					
RCX340 RCX240-R3	2500	Programming / I/O point trace / Remote command / Operation using RS-232C communication					

Note. "Harmonic" and "Harmonic drive" are the registered trademarks of Harmonic Drive Systems Inc.

Note. The movement range can be limited by changing the positions of X and Y axis mechanical stoppers. (The movement range is set to the maximum at the time of shipment.)

See our robot manuals (installation manuals) for detailed information. information

To set the standard coordinates with high accuracy, use a standard coordinate setting jig (option). Refer to the user's manual (installation manual) for more details.

Our robot manuals (installation manuals) can be downloaded from our website at the address below: http://global.yamaha-motor.com/business/robot/

