Arm length 900mm
Maximum payload 20kg

■ Ordering method RCX340-4 YK900XGS Model Cable W: Wall-mount (same as per external view) U: Inverse wall-mount (upside down) 200: 200mm No entry: None 400: 400mm F: With tool flange Specify various controller setting items. RCX340 ▶ P.508 **R3** BB Controller — CE Marking — Regeneratizve unit — Expansion I/O — Network option — IVY System — Gripper — Battery

Specify various controller setting items. RCX240/RCX240S ▶ P.495

Note 1. When installing the robot, always follow the specifications.

Do not install the ceiling-mount robot upside down or do not install the inverse type robot to a ceiling. Incorrect installation can cause trouble or malfunction.

			X-axis	Y-axis	Z-axis	R-axis
Axis	Arm length		500 mm	400 mm	200 mm 400 mm	-
specifications	Rotation angle		+/-130 °	+/-150 °	-	+/-360 °
AC servo motor output			750 W	400 W	400 W	200 W
Deceleration mechanism	Speed reducer		Harmonic drive	Harmonic drive	Ball screw	Harmonic drive
	Transmission	Motor to speed reducer	Direct-coupled			
	method	Speed reducer to output	Direct-coupled			
Repeatability Note 1			+/-0.0	12 mm	+/-0.01 mm	+/-0.004 °
Maximum speed			9.9 m/sec 2.3 n/sec   1.7   920 °/sec (wall-mount)   9.9 m/sec   480 °/sec (inverse wall-mount)   9.9 m/sec   1.7   920 °/sec (wall-mount)   9.7   920 °/sec (wall-mount)   920 °/s			
Maximum payload			20 kg (Standard specification), 19 kg (Option specifications)			
Standard cycle time: with 2kg payload Note 2			0.49 sec			
R-axis tolerable moment of inertia Note 3			1.0 kgm <sup>2</sup>			
User wiring			0.2 sq × 20 wires			
User tubing (Outer diameter)			ф 6 × 3			
Travel limit			1.Soft limit 2.Mechanical stopper (X,Y,Z axis)			
Robot cable length			Standard: 3.5 m Option: 5 m, 10 m			
Weight			Z axis 200 mm: 54 kg Z axis 400 mm: 56 kg			

Controller							
Controller	Power capacity (VA)	Operation method					
RCX340 RCX240-R3	2500	Programming / I/O point trace / Remote command / Operation using RS-232C communication					

Note. "Harmonic" and "Harmonic drive" are the registered trademarks of Harmonic Drive Systems Inc.

Note. The movement range can be limited by changing the positions of X and Y axis mechanical stoppers. (The movement range is set to the maximum at the time of shipment.)

See our robot manuals (installation manuals) for detailed information.

Our robot manuals (installation manuals) can be downloaded from our website at the address below: http://global.yamaha-motor.com/business/robot/