





## B14H RU type (Motor rightward, upper position)

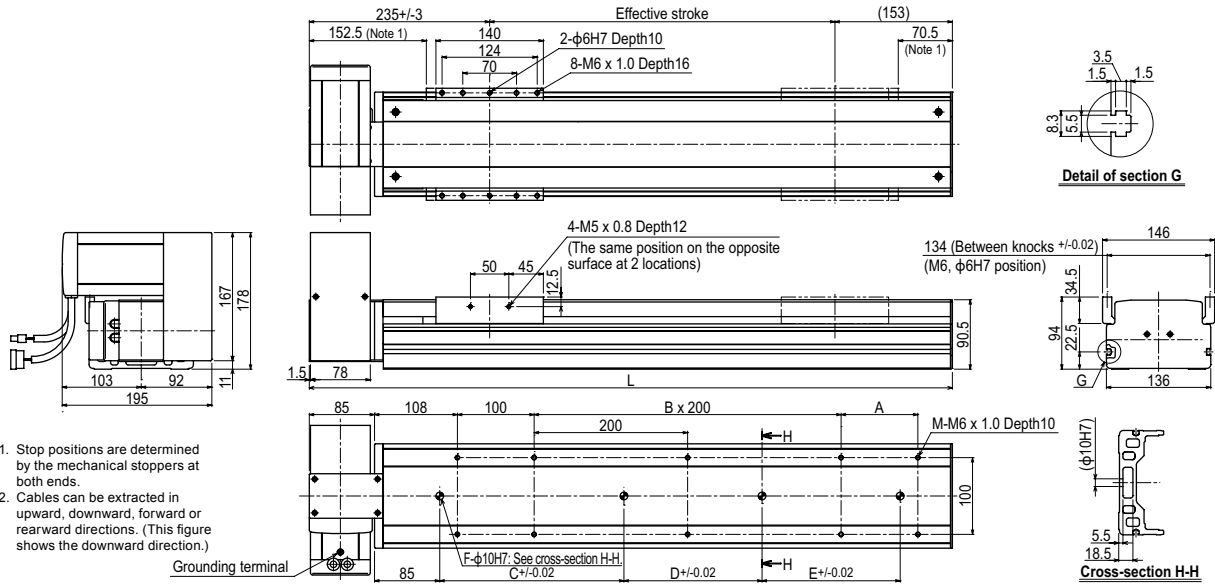


- Note 1. Stop positions are determined by the mechanical stoppers at both ends.
- Note 2. Cables can be extracted in upward, downward, forward or rearward directions. (This figure shows the downward direction.)

## B14H RD type (Motor rightward, lower position)

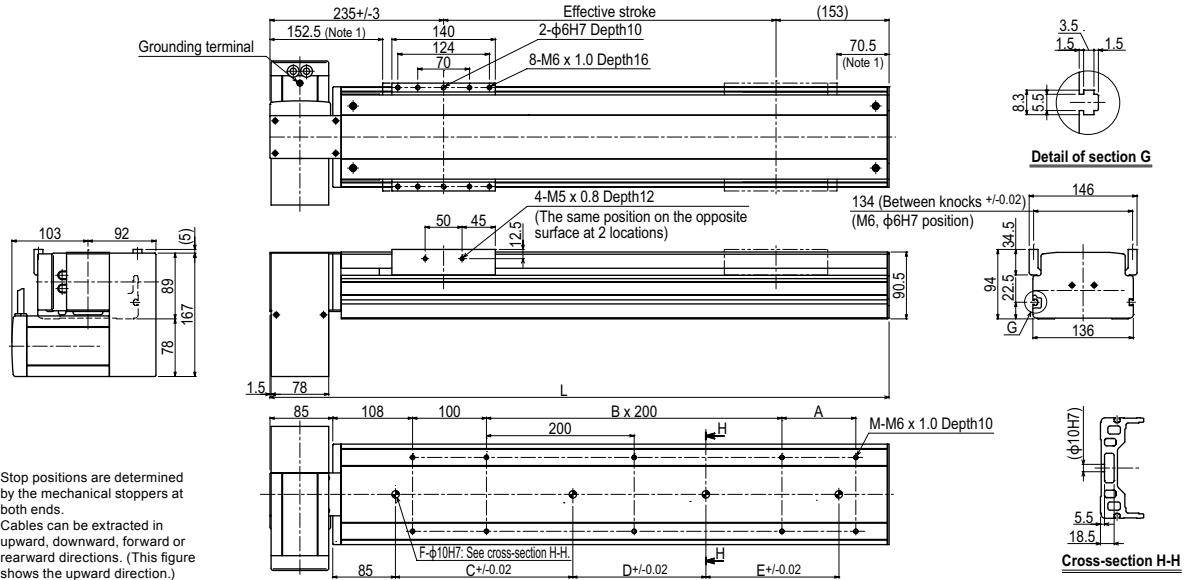

- Note 1. Stop positions are determined by the mechanical stoppers at both ends.
- Note 2. Cables can be extracted in upward, downward, forward or rearward directions. (This figure shows the upward direction.)

## B14H LU type (Motor leftward, upper position)

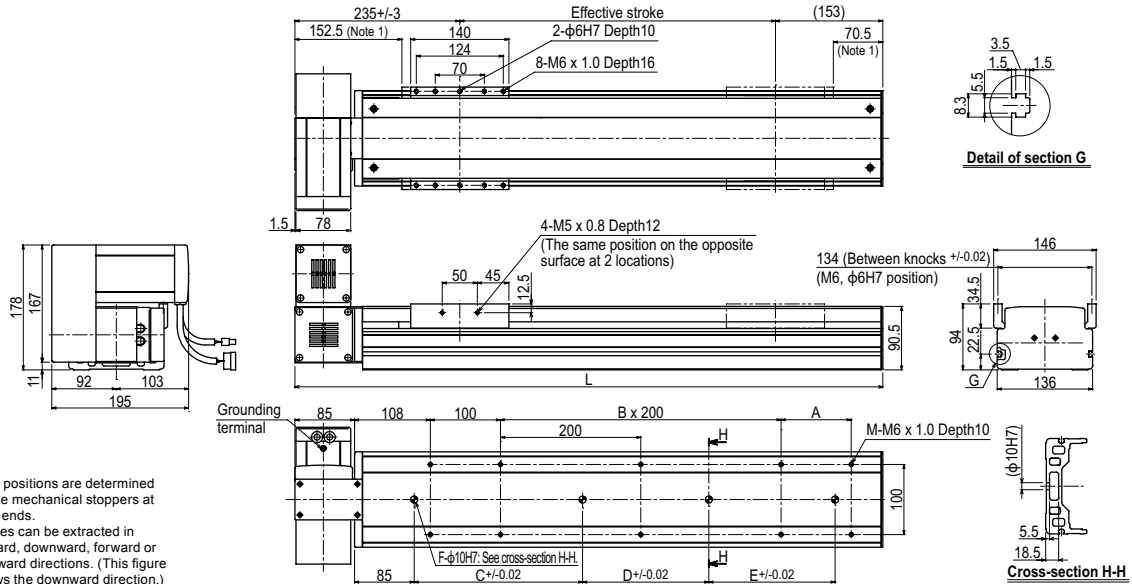

- Note 1. Stop positions are determined by the mechanical stoppers at both ends.
- Note 2. Cables can be extracted in upward, downward, forward or rearward directions. (This figure shows the downward direction.)