

# TS-SD

- CE compliance
- Only for pulse train control
- Dedicated for TRANSERVO

The TS-SD is a high-performance robot driver specifically designed for the TRANSERVO series that supports pulse train command input.



TS-SD

## Main functions ▶ P.57



Support software for PC

▶ TS-Manager

P.552

### Basic specifications


Item	Model	TS-SD
<b>Basic specifications</b>		
Number of controllable axes		Single-axis
Controllable robots		TRANSERVO series <sup>Note</sup>
Current consumption		3A (Rating) 4.5A (Max.)
Dimensions		W30 × H162 × D82mm
Weight		Approx. 0.2kg
Input power supply	Control power supply	DC24V +/-10%
	Main power supply	DC24V +/-10%
Operating method		Pulse train control
Control method		Closed loop vector control method
Position detection method		Resolver
Resolution		20480 P/rev, 4096 P/rev
Origin search method		Incremental
External input/output	Pulse train command input	Line driver method : 500 kpps or less Open collector method : 100 kpps or less (DC5 to 24V +/-10%)
	Input	Servo ON (SERVO), reset (RESET) origin search (ORG)
	Output	Servo status (SRV-S), alarm (/ALM), positioning completion (IN-POS), return-to-origin end status (ORG-S)
	External communications	RS-232C 1CH
<b>Options</b>		
Support software for PC		TS-Manager
<b>General specifications</b>	Operating temperature	0°C to 40°C
	Storage temperature	-10°C to 65°C
	Operating humidity	35% to 85%RH (non-condensing)
	Storage humidity	10% to 85%RH (non-condensing)
	Atmosphere	Indoor location not exposed to direct sunlight. No corrosive, flammable gases, oil mist, or dust particles
	Anti-vibration	All XYZ directions 10 to 57Hz unidirectional amplitude 0.075mm 57 to 150Hz 9.8m/s <sup>2</sup>
	Protective functions	Position detection error, overheat, overload, overvoltage, low voltage, position deviation, control power voltage drop, overcurrent, motor current error, CPU error, motor line disconnection, command speed over, pulse frequency over

Note. Except for RF type sensor specifications and STH type vertical specifications.

### I/O signal table

No.	Signal Name	Description
1	+COM	I/O power supply input (DC 24V +/- 10%)
2	OPC	Open collector power supply input
3	PULS1	Command pulse input 1
4	PULS2	Command pulse input 2
5	DIR1	Command direction input 1
6	DIR2	Command direction input 2
7	ORG	Return-to-origin
8	NC	Prohibited to use this signal.
9	RESET	Reset
10	SERVO	Servo ON
11	ORG-S	Return-to-origin end status
12	IN-POS	Positioning completion
13	/ALM	Alarm
14	SRV-S	Servo status
15	-COM	I/O power supply input (0V)
16	FG	Ground

### I/O connector

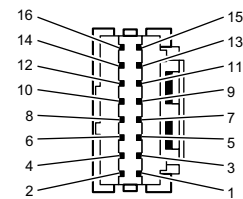

Controllable robot	<b>TRANSERVO P.127</b>
CE marking	
Field networks	—

**Model Overview**

Name		TS-SD
Controllable robot		Dedicated compact single-axis TRANSERVO
Input power	Main power supply	DC24V +/-10% maximum
	Control power supply	DC24V +/-10% maximum
Operating method		Pulse train control
Maximum number of controllable axes		Single-axis
Origin search method		Incremental

**Ordering method**


**Controller only**      **Robot + Controller**

**TS-SD** Note


Controller      Robot model (TRANSERVO Series)      Cable length (1L: 1 meter, 3L: 3 meters, 5L: 5 meters, 10L: 10 meters (flexible cables))      Controller **SD 1**      I/O cable (1L: 1 meter)

Note. I/O cable (1 meter) comes supplied with unit.

**Part names**

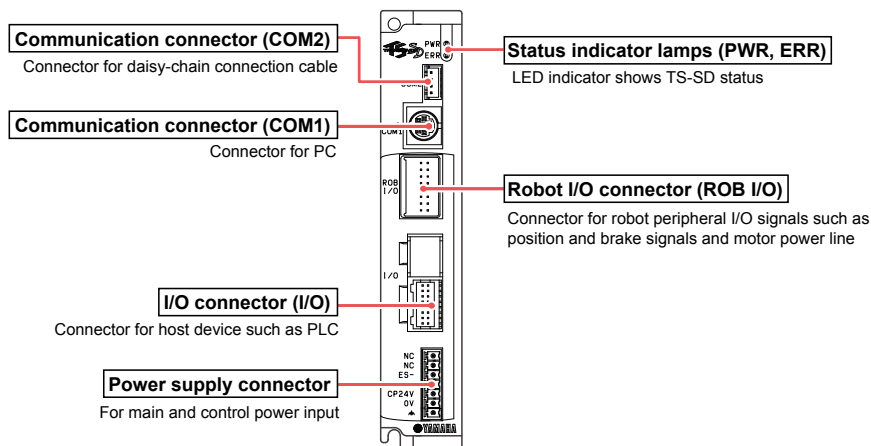

**Dimensions**

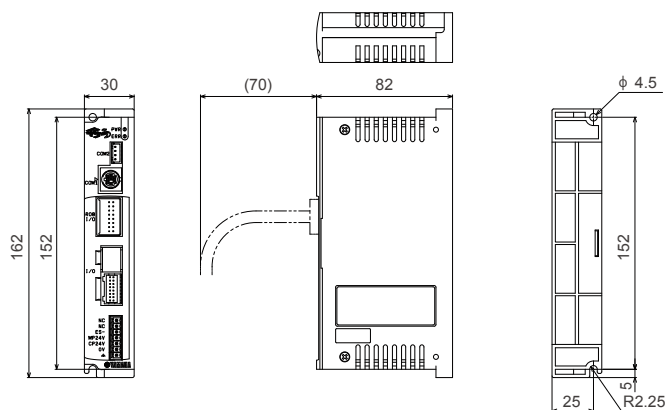

Articulated robots  
YA

Linear conveyor modules  
LCM100

Compact single-axis robots  
TRANSERVO

Single-axis robots  
FLIP-X

Linear motor single-axis robots  
PHASER

Cartesian robots  
XY-X

SCARA robots  
YK-X

Pick & place robots  
YP-X

CLEAN

CONTROLLER

INFORMATION

Robot positioner

Pulse string driver


Robot controller

I/V/I/V2 Electric gripper

Option

## Installation conditions

- Install the TS-SD inside the control panel.
- Install the TS-SD on a vertical wall.
- Install the TS-SD in a well ventilated location, with space on all sides of the TS-SD (See fig. at right.).
- Ambient temperature : 0 to 40°C
- Ambient humidity : 35 to 85% RH (no condensation)

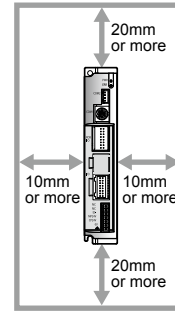


## I/O signal list


Type	Signal Name	Open collector	Line driver	Description
Inputs	OPC	Open collector power supply input	(Connection prohibited. <sup>Note 2</sup> )	Input the power supply for the open collector. (DC5 to 24V +/- 10%)
	PULS1	(Connection prohibited. <sup>Note 1</sup> )	Command pulse input (+)	Input terminal for pulse train input commands. Select from 3 command forms by changing parameters. • Phase A/Phase B input • Pulse/Sign input • CW/CCW input
	DIR1	(Connection prohibited. <sup>Note 1</sup> )	Command direction input (+)	
	PULS2	Command pulse input	Command pulse input (-)	
	DIR2	Command direction input	Command direction input (-)	
	ORG	Return-to-origin	←	Starts return-to-origin when ON and stops it when OFF.
RESET	Reset	←	Alarm reset	
Outputs	SREVO	Servo ON	←	ON: servo on; OFF: servo off.
	ORG-S	Return-to-origin end status	←	ON at return-to-origin end.
	IN-POS	Positioning completion	←	ON when accumulated pulse in deviation counter are within specified value range.
	/ALM	Alarm	←	ON when normal. OFF when alarm occurs.
	SRV-S	Servo status	←	ON when servo is on.

Note 1. When using the open collector specifications, do not connect any signal to the PULS1 and DIR1 terminals. Doing so may cause the driver to malfunction or breakdown.  
Note 2. When using the line driver specifications, do not connect any signal to the OPC terminal. Doing so may cause the driver to malfunction or breakdown.

### Input / output signal connection diagram [open collector]

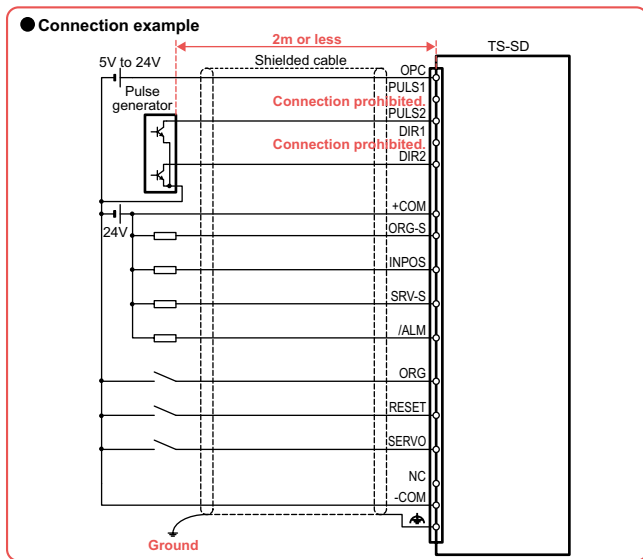


### Input / output signal connection diagram [line driver]

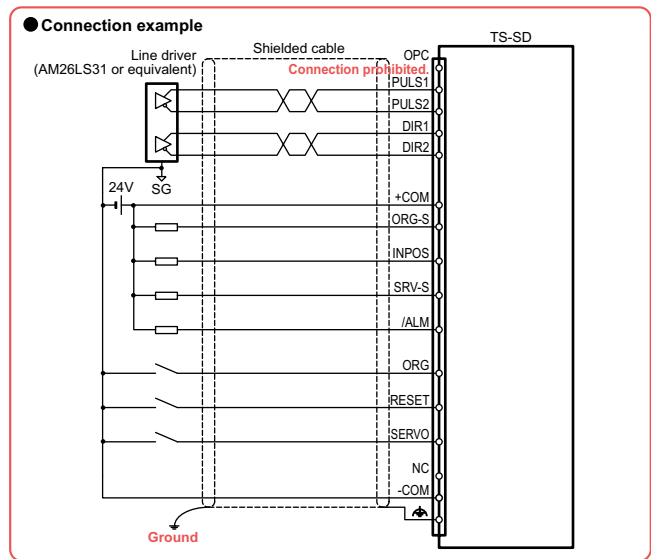

## Daisy chain function

Connecting two or more TS series controllers and drivers in a daisy chain allows editing data on any one unit from a PC.

- Up to 16 units connectable
- Requires daisy chain coupler cables.

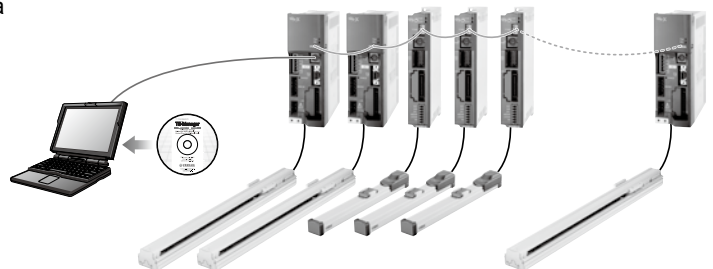



# Accessories and part options

## TS-SD

### Standard accessories

#### ● Power connector



Model KCC-M4421-00

TS-S2  
TS-SH  
TS-SD

#### ● I/O cables (1m)



Model KCC-M5362-00

TS-SD

### Options

#### ● Support software TS-Manager

P.552



Model KCA-M4966-0J (Japanese)  
KCA-M4966-0E (English)

TS-S2  
TS-SH  
TS-X  
TS-P  
TS-SD

#### ● TS-Manager environment

OS	Microsoft Windows 2000 / XP / Vista (32bit/64bit) / 7 (32bit/64bit)
CPU	Exceeding the environment recommended by the OS being used
Memory	Exceeding the environment recommended by the OS being used
Hard disk	Vacant capacity of more than 20MB in the installation destination drive
Communication port	Serial (RS-232C), USB
Applicable controllers	TS-S2 / TS-SH / TS-X / TS-P / TS-SD

Note. Windows is the registered trademark of US Microsoft Corporation in U.S.A. and other countries.

#### ● Data cables

Communication cable for TS-Manager. Select from USB cable or D-sub cable.



Model USB type (5m) KCA-M538F-A0  
D-Sub type (5m) KCA-M538F-01

Note. USB driver for communication cable can also be downloaded from our website.

TS-S2  
TS-SH  
TS-X  
TS-P  
TS-SD

#### ● Daisy chain and gateway connection cable



Model KCA-M532L-00 (300mm)

TS-S2  
TS-SH  
TS-X  
TS-P  
TS-SD